

Transmitter	
Dimensions	67mm (w) - 20mm (d)
Weight	40g
Frequency	433.92MHZ
Signal Distance	Outdoors 80m - Indoors 30m (can pass through walls)
Standby Power	0W
Operating Pressure	350g

Receiver	
Dimensions	67mm
Weight	56g
Power Supply	110-240V AC
Plug	UK 3 Pin
Standby Power	0.25W

Please Register at:

[www.curv360.co.uk/warranty](http://www.curv360.co.uk/warranty)

1. Warranty is 5 years from the purchase date.
2. If your product is faulty within the 5 year warranty, please supply us with the complete warranty details and a proof of purchase at [www.curv360.co.uk/warranty](http://www.curv360.co.uk/warranty)
3. If the product has been damaged due to incorrect operation or user damage, this warranty will be invalid.


[curv360.co.uk](http://curv360.co.uk)

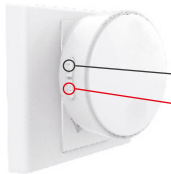

**THE SELF POWERED**  
WIRELESS DOORBELL

**1 Transmitter / 1 Receiver****CURVWB01**

User Manual

[curv360.co.uk](http://curv360.co.uk)

## Step 1: Quick Setup



When the receiver is plugged in, the doorbell will ring once

4 volume levels.

Over 30 different tunes.

## Step 2: Test



When you press the transmitter, the receiver rings.

## Step 3: Install

### Option 1

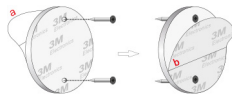


1.) Remove the double sided tape



2.) Stick to the wall

### Option 2



1.) Remove the double sided tape and stick to the wall, secure the fixing with extra screws using the holes provided

**Note:** Please ensure that the fixing surface, is clean, dry and grease free.

## Setup: Re-pairing

The doorbell has already been paired and is ready to use. However when adding or replacing the transmitter you will need to re-pair. One transmitter can control several receivers or several transmitters can control one receiver, should you wish to buy additional units.

1.) Press and hold any button, on the side of the receiver for at least 3 seconds.

2.) Press the transmitter, the receiver will start to ring.



## Setup: Un-pairing



1.) Press and hold any button, on the side of the receiver for at least 10 seconds.